

EPCS DEACTIVATION

1. POWER DOWN PCS

Close all display windows.

At the Taskbar on bottom of Display
sel EXIT

On 'Logout Confirmation' window
sel OK

When 'Type any key to continue' appears

If shuttle AFD

PCS	PCS 1,2 Thinkpad PWR switches → Off
Pwr Sply	PCS1 28V DC PWR SPLY switch → Off (Lt Off) PCS2 28V DC PWR SPLY switch → Off (Lt Off)
A15	MNC DC UTIL PWR (J2) → Off
L12/A3	PDIP DC POWER 2 → Off

If ISS RS

PCS	PCS Thinkpad PWR switch → Off
Pwr Sply	PCS 28V DC PWR SPLY switch → Off (Lt Off)
ĐÁÑ- 10/3	RS Power switch → Off

2. DISCONNECT EPCS POWER AND DATA CABLE

If shuttle AFD

L12/A3	Disconnect both Orb 1553 Data cables from N1-1 (J103) and N1-2 (J107) and from the 1553 PC Card Adapter cables. Disconnect both the 6-foot and 10-foot 28V DC PWR SPLY cables from the 28V DC PWR SPLYs (J1). Disconnect both 10-foot 20V DC PWR SPLY cables from the PCS DC PWR outlet and 28V DC PWR SPLY outlet (J2).
--------	--

If ISS RS

ĐÁÑ- 10/3	Disconnect RS Power cable. Disconnect RS 1553 Data/Power cable to PCR outlet and the 28V DC PWR SPLY outlet (J1) and the 1553 PC Card Adapter cable.
Pwr Sply	Disconnect the 10-foot 20V DC PWR cable from the 28V DC PWR SPLY outlet (J2) and from the PCS.

- TBD
3. STOW PCS
- PCS - Two Thinkpads
 - Two 10-foot 20V DC PWR cables
 - Two PCS Kits (One 1553 card and 22-inch Adapter cable in each Kit)
 - If shuttle AFD
 - One 6-foot 28V DC PWR SPLY cable
 - One 10-foot 28V DC PWR SPLY cable
 - Two 8-foot Orb 1553 Data cables
 - Two 28V DC PWR SPLYs
 - If ISS RS
 - Stow RS 1553 Data/Power cable in the FGB
 - One 28V DC PWR SPLY